S-FCR4700
S-FCR3700
S-W3700-K

OPERATING GUIDE

SPEAKER SYSTEM

WHAT'S IN THE BOX

· S-FCR4700

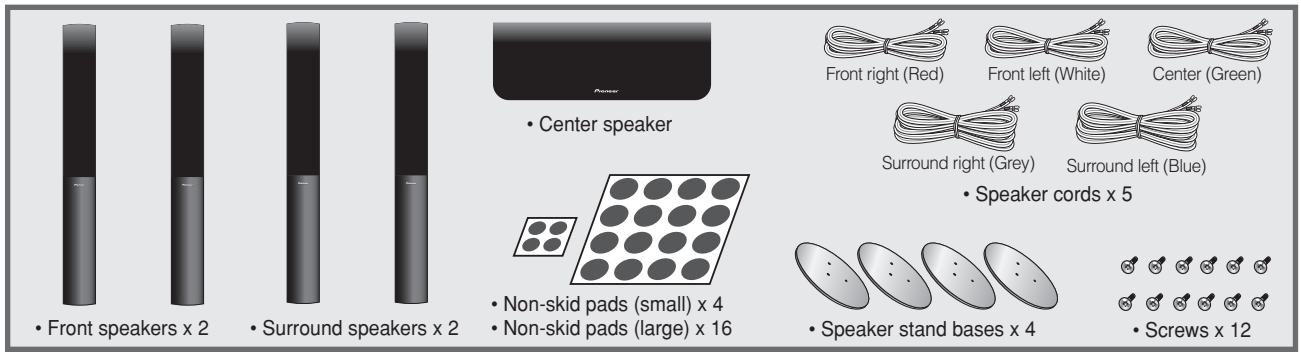
• Front speakers x 2
• Surround speakers x 2
• Center speaker
• Non-skid pads (small) x 4
• Non-skid pads (large) x 16
Front right (Red)
Front left (White)
Center (Green)
Surround right (Grey)
Surround left (Blue)
• Speaker cords x 5
• Speaker stand bases x 4
• Screws x 12

· S-FCR3700

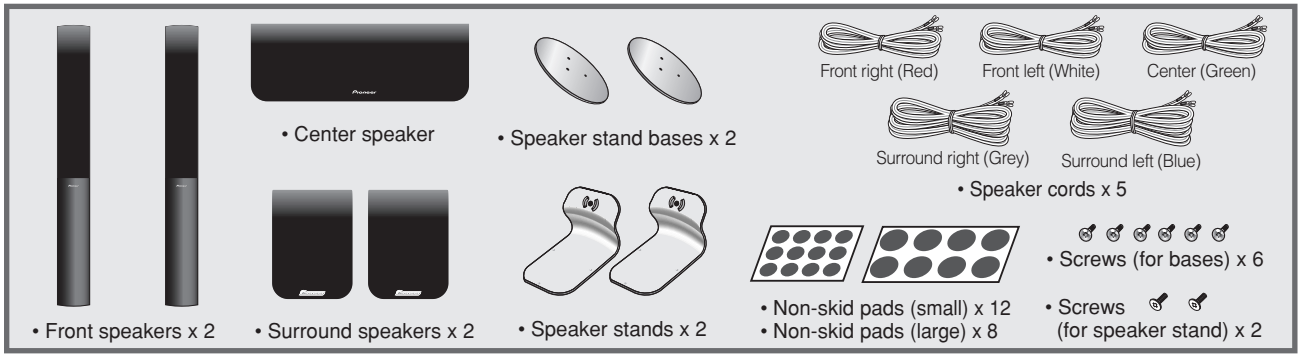
• Front speakers x 2
• Surround speakers x 2
• Center speaker
• Speaker stand bases x 2
• Speaker stands x 2
Front right (Red)
Front left (White)
Center (Green)
Surround right (Grey)
Surround left (Blue)
• Speaker cords x 5
• Non-skid pads (small) x 12
• Non-skid pads (large) x 8
• Screws (for bases) x 6
• Screws (for speaker stand) x 2

· S-W3700-K

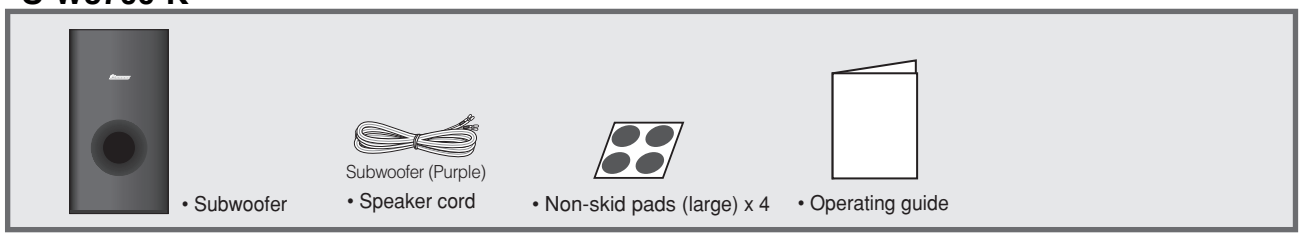

IMPORTANT:

The serial number for this equipment is located on the side of the packing case. Please write this serial number on the warranty page and keep it in a secure area for future reference.

BEFORE USE

- Thank you for buying this Pioneer product.
- Please read through this operating guide before using your speaker system to optimize performance.

FRONT / CENTER / SURROUND SPEAKERS

In order to prevent damage to the speaker system resulting from input overload, please observe the following precautions:

- When connecting or disconnecting cables, be sure amplifier power is OFF.
- Do not use excessive amplifier volume if using a tone control to emphasize high or low frequencies.

INSTALLATION PRECAUTIONS

FRONT / CENTER / SURROUND SPEAKERS

- Do not install these units near a stove or other heating appliance, or put them in a place exposed to the sun. Such locations may cause the cabinet to change color and the speaker system to break down.
- The front, center and surround speakers supplied with this system are magnetically shielded. However, placing them extremely close to a television may result in color distortion on the screen. If this happens, move the speakers a little further away and switch off the television for 15 to 30 minutes.

SUBWOOFER

- Do not place anything on top of the cabinet.
- Do not spill liquid on the cabinet.
- Place the subwoofer at least 8 inches (20 cm) from any wall or curtain in order to avoid heat build-up.
- The subwoofer is not magnetically shielded and so should not be placed near a TV or monitor. Magnetic storage media (such as floppy discs and tape or video cassettes) should also not be kept close to the subwoofer.

CAUTION:

- Do not connect this speaker to any amplifier other than the one supplied with this system. Connection to any other amplifier may result in a malfunction or a fire.
- Do not attach the subwoofer, front and surround speakers to the wall or ceiling. They may fall off and cause injury (S-FCR4700 only).
- Do not attach the subwoofer and front speakers to the wall or ceiling. They may fall off and cause injury (SFCR3700 only).

WARNING:

Handling the cord on this product or cords associated with accessories sold with the product will expose you to chemicals listed on proposition 65 known to the State of California and other governmental entities to cause cancer and birth defect or other reproductive harm.

Wash hands after handling

CONNECTING YOUR SYSTEM

IMPORTANT:

Make sure all equipment is turned off before making any connections.

FRONT / CENTER / SURROUND / SUBWOOFER SPEAKERS

Correct wiring of your loudspeakers is essential for achieving the best sound quality. Be careful to ensure proper polarity of connection.

Twist and pull off the protective shields on each wire.

Connect to the speaker terminals on the rear of the receiver.

To connect, insert the colored wire into the matching positive (colored) terminal and the other wire into the negative (black) terminal as shown below.

Note that the color-coded tabs are as follows:

- **Red :** Front right (R)
- **White :** Front left (L)
- **Green :** Center speaker
- **Purple :** Subwoofer
- **Grey :** Surround right (R)
- **Blue :** Surround left (L)

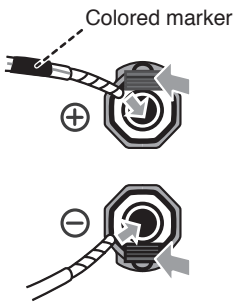

Connect to the speaker terminals on the rear of the speakers.

Match the colored wire with the color-coded label (above the tabs), then insert the colored wire into the red (+) tab and the other wire with the black (–) tab.

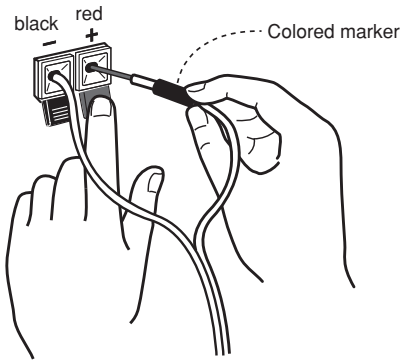

PLACEMENT AND FINE TUNING

SUBWOOFER

Sound spreads in all directions in the very low frequency range. Human hearing cannot easily detect the source of very low frequencies. Be sure to provide a space of at least 8 inches (20cm) between the rear of the subwoofer and the nearest wall.

FRONT SPEAKERS

For best results the loudspeakers should be separated a distance approximately equal to the listening distance. Angling the loudspeakers inward towards the listener will improve the image stability for non-central listeners. Close proximity to a side or rear wall will enhance the midbass performance, although too close (particularly a corner location) and the bass may be unnaturally high and image performance may be degraded.

CENTER SPEAKER

The loudspeaker should be positioned below the TV. For best results align the front of the loudspeaker with the front of the TV. If the loudspeaker is placed under the TV and very close to the floor, then tilting upwards may be beneficial.

When installing the center speaker on top of the TV, be sure to secure it with tape or some other suitable means. Otherwise, the speaker may fall from the TV due to external shocks such as earthquakes, endangering those nearby or damaging the speaker.

SURROUND SPEAKERS

For best results the loudspeaker should be positioned near ear level (S-FCR3700 only).

STANDARD SURROUND SETUP

This is a standard multichannel surround sound speaker setup for optimal 5.1 channel home theater sound.

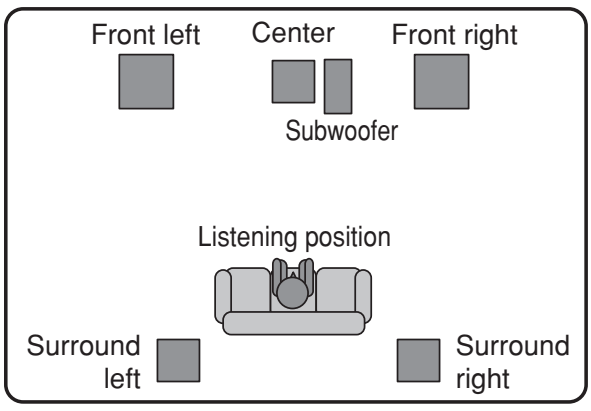

Assembling the speaker stand bases and securing your front and surround (S-FCR4700 only) speakers

Attach the speaker stand bases to the stems using the screws provided.

Once you have aligned the stem and base, secure with the small screws at the points shown below. Note that the speaker should face in the direction of the base of the isosceles triangle (outlined below).

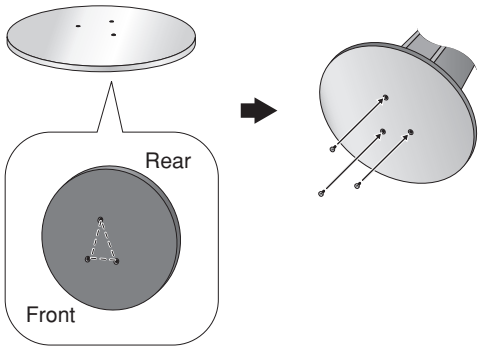

Secure each of the front and surround (S-FCR4700 only) speakers using the plastic catch provided.

Screw two picture hooks or similar into the wall behind the speaker. Pass a cord around the hooks and through the plastic catch so that the speaker is stabilized (make sure to test that it supports the weight of the speaker).

After installing, make sure the speaker is securely fixed.

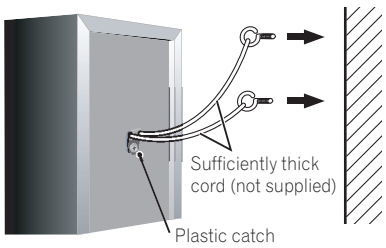

CAUTION:

- The plastic catch is not a mounting fixture, and the speaker should not be hung directly from the wall using this catch. Always use a cord when stabilizing the speaker.
- Pioneer disclaims all responsibility for any losses or damage resulting from improper assembly, installation, insufficient strength of the installation materials, misuse, or natural disasters.

NON-SKID PADS

Attach the small non-skid pads to the base of the surround (S-FCR3700 only) and center speakers. The large non-skid pads are for the front and surround (S-FCR4700 only) speakers, and the subwoofer (as shown).

Use the adhesive side of the pads to attach them to the base of each speaker and the subwoofer.

If you choose to use speaker stands with the surround speakers, attach the non-skid pads to the stand bases instead of to the underside of the speakers (S-FCR3700 only).

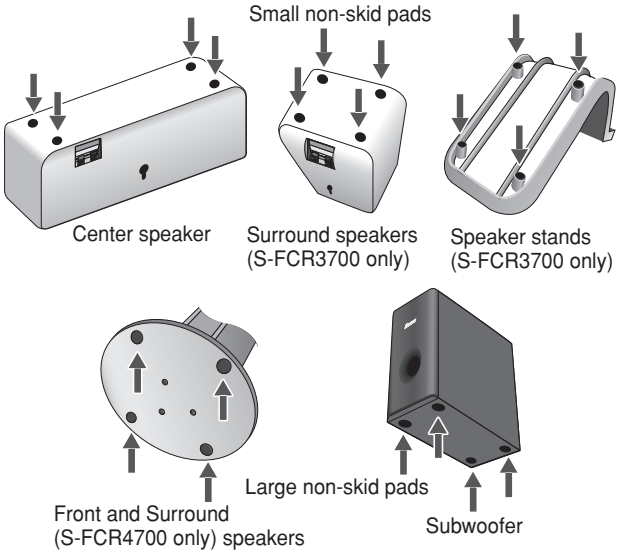

OPTIONALLY, ATTACH THE SURROUND SPEAKERS TO THE SPEAKER STANDS (S-FCR3700 ONLY)

For each speaker,line up the spurs on the stand with the holes on the back of the speaker and insert, then secure the speaker to the stand with the screw provided.

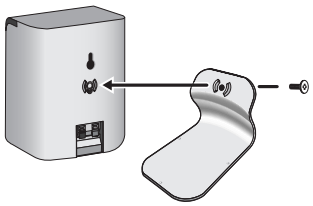

WALL MOUNTING THE SURROUND (S-FCR3700 ONLY) AND CENTER SPEAKERS

The surround (S-FCR3700 only) and center speakers have mounting holes which can be used to mount the speaker on the wall.

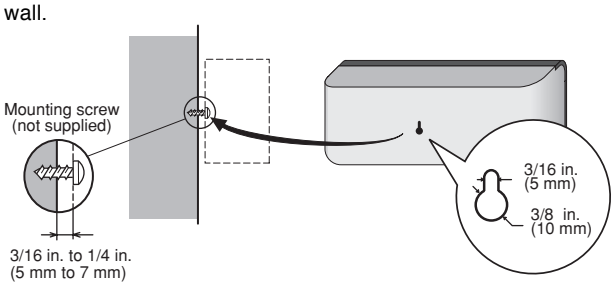

Before mounting (see above), keep in mind the following points:

- Remember that the speaker system is heavy and that its weight could cause the screws to work loose, or the wall material to fail to support it, resulting in the speaker falling. Make sure that the wall you intend to mount the speakers on is strong enough to support them. Do not mount on plywood or soft surface walls.
- Mounting screws are not supplied. Use screws suitable for the wall material and support the weight of the speaker.

CAUTION:

- If you are unsure of the qualities and strength of the walls, consult a professional for advice.
- Pioneer is not responsible for any accidents or damage that result from improper installation.

CABINET MAINTENANCE

Use a polishing cloth or dry cloth to wipe off dust and dirt.

When the cabinet is very dirty, clean with a soft cloth dipped in some neutral cleanser diluted five or six times with water, and then wipe again with a dry cloth. Do not use furniture wax or cleaners.

Never use thinners, benzine, insecticide sprays and other chemicals on or near the cabinets, since these will corrode the surfaces.

TROUBLESHOOTING

SYMPTOM	PROBABLE CAUSE	REMEDY
1. No sound	• Bad speaker wire or connection • Receiver is off • Volume control is at zero	• Connect correctly or replace wire • Turn on receiver • Slowly turn up volume
2. Sound is distorted	• Extreme signal condition	• Turn down the amplifier's output level (volume, bass control, bass boost) to lower the level.

SPECIFICATIONS

FRONT SPEAKERS (S-FCR4700,S-FCR3700)

SURROUND SPEAKERS (S-FCR4700)

Enclosure ..... Closed-box floorstanding type (magnetically shielded)
System ..... 2-way system
Speakers:
Woofer ..... 7.7 cm cone type x 2
Tweeter ..... 2.6 cm semi-dome type
Nominal impedance ..... 8 Ω
Frequency range ..... 70 Hz to 20 kHz
Dimensions ..... 260 mm (W) x 1096.5 mm (H) x 260 mm (D)
10 1/4 in. (W) x 43 3/16 in. (H) x 10 1/4 in. (D)
Weight ..... 4.2 kg / 9 lb 4 oz

SURROUND SPEAKERS (S-FCR3700)

Enclosure ..... Closed-box bookshelf type (magnetically shielded)
System ..... 7.7 cm 1-way system
Speakers ..... 7.7 cm cone type
Nominal impedance ..... 8 Ω
Frequency range ..... 80 Hz to 20 kHz
Dimensions ..... 100 mm (W) x 136 mm (H) x 80 mm (D)
3 15/16 in. (W) x 5 3/8 in. (H) x 3 1/8 in. (D)
Weight ..... 0.55 kg / 1 lb 3 oz

CENTER SPEAKER (S-FCR4700,S-FCR3700)

Enclosure ..... Closed-box bookshelf type (magnetically shielded)
System ..... 7.7 cm 1-way system
Speakers ..... 7.7 cm cone type
Nominal impedance ..... 8 Ω
Frequency range ..... 75 Hz to 20 kHz
Dimensions ..... 270 mm (W) x 96 mm (H) x 90 mm (D)
10 5/8 in. (W) x 3 3/4 in. (H) x 3 9/16 in. (D)
Weight ..... 0.78 kg / 1 lb 12 oz

SUBWOOFER (S-W3700-K)

Enclosure ..... Bass-reflex floor type
System ..... 16 cm 1-way system
Speaker ..... 16 cm cone type
Nominal impedance ..... 8 Ω
Frequency range ..... 30 Hz to 2 kHz
Dimensions ..... 190 mm (W) x 360 mm (H) x 320 mm (D)
7 1/2 in. (W) x 14 3/16 in. (H) x 12 5/8 in. (D)
Weight ..... 4.0 kg/ 8 lb 13 oz

ACCESSORIES

Speaker cords
(S-FCR4700,S-FCR3700) 5
(S-W3700-K) 1
Non-skid pads (For subwoofer) (S-W3700-K) 4
Non-skid pads (Large) (For speaker stand bases)
(S-FCR3700) 8
(S-FCR4700) 16
Non-skid pads (Small)
(For center and surround speakers) (S-FCR3700) 12
(For center speaker) (S-FCR4700) 4
Speaker stands (For surround speakers) (S-FCR3700) 2
Screws (For speaker stands) (S-FCR3700) 2

NOTE: Specifications and design subject to possible modification without notice due to improvements.

Published by Pioneer Corporation.
Copyright © 2007 Pioneer Corporation.
All rights reserved.

Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:
- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably andclearly, and without distortion.

Once you have established a comfortable sound level:
- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Decibel Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.

S-FCR4700
S-FCR3700
S-W3700-K

MODE D'EMPLOI

ENCEINTES ACOUSTIQUES

CONTENU DE L'EMBALLAGE

• S-FCR4700

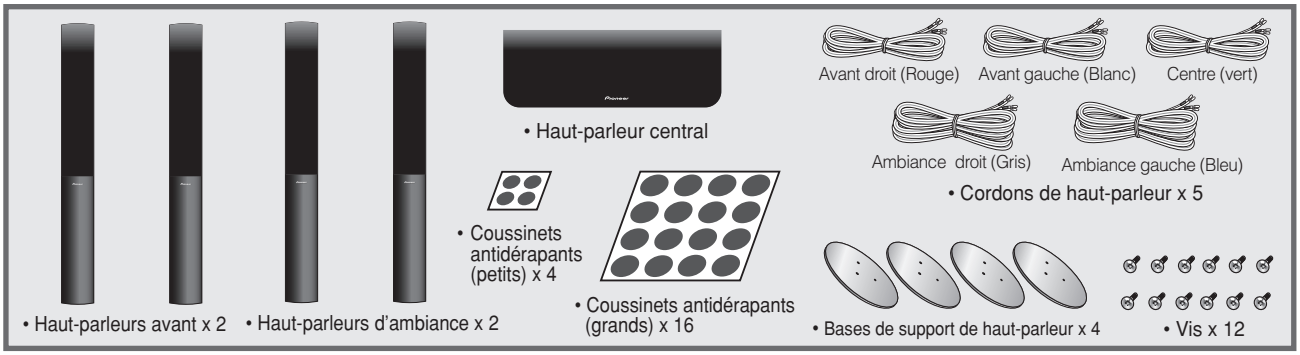
• Haut-parleurs avant x 2
• Haut-parleurs d'ambiance x 2
• Haut-parleur central
• Coussinets antidérapants (petits) x 4
• Coussinets antidérapants (grands) x 16
Avant droit (Rouge)
Avant gauche (Blanc)
Centre (vert)
Ambiance droit (Gris)
Ambiance gauche (Bleu)
• Cordons de haut-parleur x 5
• Bases de support de haut-parleur x 4
• Vis x 12

• S-FCR3700

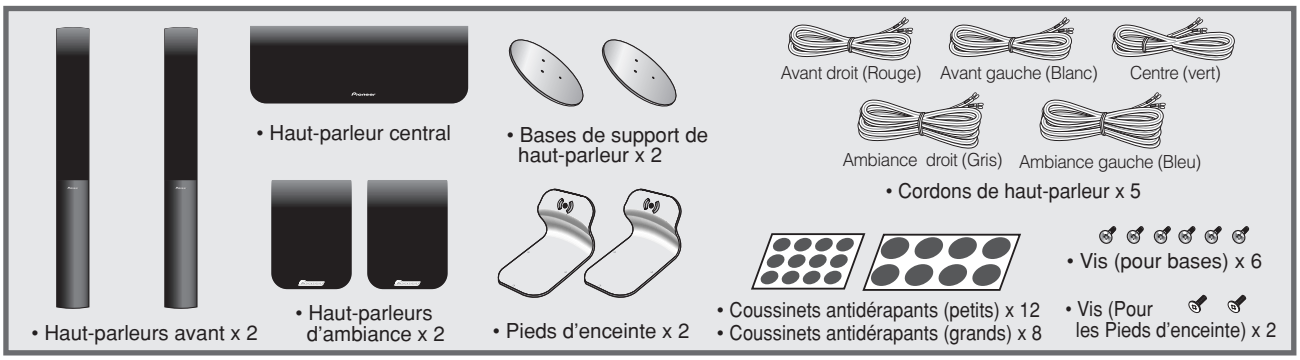
• Haut-parleurs avant x 2
• Haut-parleurs d'ambiance x 2
• Haut-parleur central
• Bases de support de haut-parleur x 2
• Pieds d'enceinte x 2
Avant droit (Rouge)
Avant gauche (Blanc)
Centre (vert)
Ambiance droit (Gris)
Ambiance gauche (Bleu)
• Cordons de haut-parleur x 5
• Coussinets antidérapants (petits) x 12
• Coussinets antidérapants (grands) x 8
• Vis (pour bases) x 6
• Vis (Pour les Pieds d'enceinte) x 2

• S-W3700-K

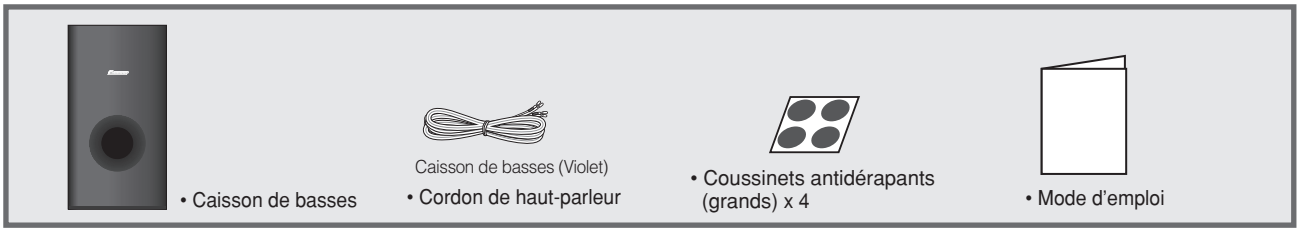

IMPORTANT :

Le numéro de série de cet appareil est situé sur le côté du carton d'emballage. Notez ce numéro sur la page de garantie et conservez cette dernière dans un endroit sûr pour le cas où vous en auriez besoin ultérieurement.

AVANT LA MISE EN SERVICE

- Merci de votre achat de cet appareil Pioneer.
- Veuillez lire attentivement ce mode d'emploi avant d'utiliser ces enceintes acoustiques, afin d'en obtenir des performances optimales.

HAUT-PARLEURS AVANT / CENTRAL / AMBIANCE

Pour éviter aux enceintes acoustiques des dégâts causés par une surcharge à l'entrée, respectez les précautions suivantes :

- Avant de brancher ou de débrancher les câbles, assurez-vous que l'amplificateur est hors tension (OFF).
- N'élevez pas excessivement le volume si vous utilisez une commande des tonalités pour accentuer les hautes ou les basses fréquences.

PRÉCAUTIONS À L'INSTALLATION

HAUT-PARLEURS AVANT / CENTRAL / AMBIANCE

- N'installez pas ces appareils près d'un feu ou d'un appareil de chauffage et ne les placez pas en plein soleil. De tels endroits pourraient décolorer le coffret ou provoquer une panne des haut-parleurs.
- Les haut-parleurs avant, central et d'ambiance fournis avec ce système sont blindés magnétiquement. Toutefois, s'ils sont placés trop près d'un téléviseur, une distorsion des couleurs peut se produire sur l'écran. Dans ce cas, écartez davantage les haut-parleurs et mettez le téléviseur hors tension pendant 15 à 30 minutes.

CAISSON DE BASSE

- Ne posez rien sur le dessus du coffret.
- Ne renversez aucun liquide sur le coffret.
- Posez le caisson de basse à au-moins 20 cm de tout mur ou rideau afin d'éviter un échauffement interne.
- Comme le caisson de basse n'est pas blindé magnétiquement, ne le placez pas à proximité d'un téléviseur ou d'un moniteur. En plus, tout support magnétique de données (tels que disquettes, bandes ou cassettes vidéo) doit être placé loin du caisson de basses.

ATTENTION :

- Ne reliez pas cette enceinte à un amplificateur autre que celui qui est fourni avec le système. Cela pourrait provoquer un dysfonctionnement ou un incendie.
- Ne fixez pas le caisson de basses, les haut-parleurs avant et d'ambiance sur une paroi ou au plafond, car ils pourraient tomber et entraîner des blessures (S-FCR4700 seulement).
- Ne fixez pas le caisson de basses et les haut-parleurs avant sur une paroi ou au plafond, car ils pourraient tomber et entraîner des blessures (S-FCR3700 seulement).

BRANCHEMENT DU SYSTÈME

IMPORTANT :

Assurez-vous que tous les appareils sont hors tension avant de procéder aux branchements.

HAUT-PARLEURS AVANT / CENTRAL / AMBIANCE / CAISSON DE BASSE

Un câblage correct des haut-parleurs est indispensable pour obtenir une bonne qualité sonore. Veillez à respecter les polarités lors des branchements.

Torsadez et enlevez la gaine protective de chaque cordon.

Branchez les cordons sur les bornes de haut-parleur à l'arrière de l'ampli-tuner.

Pour installer le système, insérez le fil de couleur dans la borne positive de couleur correspondante et l'autre fil dans la borne négative noire de la façon indiquée ci-dessous. Les couleurs suivantes ont été affectées aux différentes enceintes□:

- **Rouge :** avant droit (R)
- **Blanc :** avant gauche (L)
- **Vert :** centre
- **Violet :** caisson de basses
- **Gris :** ambiance droit (R)
- **Bleu :** ambiance gauche (L)

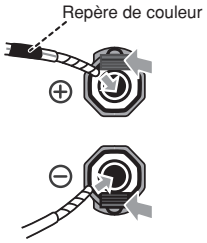

Raccordez les cordons de haut-parleur sur les bornes d'entrée à l'arrière du haut-parleur.

Faites correspondre le cordon coloré avec l'étiquette de même couleur (au-dessus du taquet), puis insérez le cordon coloré dans le taquet rouge (+) et l'autre cordon dans le taquet noir (–).

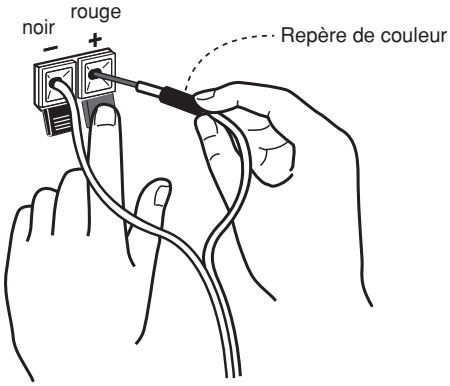

DISPOSITION ET RÉGLAGE PRÉCIS

CAISSON DE BASSE

Le son de la plage des très basses fréquences se répand dans toutes les directions. L'oreille humaine détecte difficilement la source des très basses fréquences. Veillez à laisser un espace d'au-moins 20 cm entre l'arrière du caisson de basse et le mur le plus proche.

HAUT-PARLEURS AVANT

Pour obtenir des résultats optimaux, les haut-parleurs doivent être séparés d'une distance pratiquement égale à celle jusqu'à la position d'écoute. Une orientation des haut-parleurs vers l'intérieur et vers l'auditeur améliorera la stabilité de l'image acoustique pour les auditeurs non placés au centre. La trop grande proximité d'un mur latéral ou du mur arrière renforce la performance des basses moyennes, tandis que si vous êtes trop près d'un coin surtout, les basses deviennent artificiellement hautes et l'image acoustique est amoindrie.

HAUT-PARLEUR CENTRAL

Ce haut-parleur doit être positionné sous le téléviseur. Pour optimiser les résultats, alignez l'avant du haut-parleur et celui du téléviseur. Si ce haut-parleur est posé sous le téléviseur et très près du plancher, il est préférable de l'incliner vers le haut.

À l'installation de l'enceinte centrale au-dessus du téléviseur, vérifiez de la fixer avec une bande ou quelque autre moyen approprié. Autrement, l'enceinte peut tomber du téléviseur suite à des chocs externes comme des tremblements de terre, mettant en danger toute personne se trouvant à proximité ou endommageant l'enceinte.

HAUT-PARLEURS D'AMBIANCE

Pour obtenir des résultats optimaux, les haut-parleurs doivent être positionnés près du niveau des oreilles (S-FCR3700 seulement).

AGENCEMENT STANDARD DES HAUT-PARLEURS D'AMBIANCE

Voici l'agencement habituel des haut-parleurs multicanaux pour optimiser les sons d'un "home theatre" à 5.1 canaux.

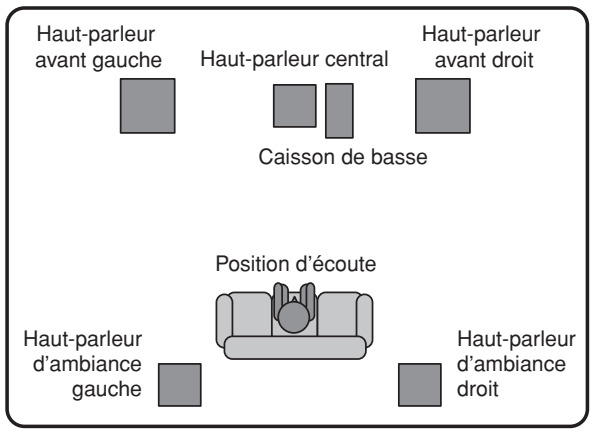

Assemblage des bases des supports de haut-parleurs et fixation des haut-parleurs avant et d'ambiance (S-FCR4700 seulement)

Fixez les bases des supports de haut-parleur sur les tiges au moyen des vis fournies.

Une fois que la tige et la base sont alignées, fixez-les avec les petites vis aux points indiqués ci-après. Notez que le haut-parleur doit être dirigé vers la base du triangle isocèle (décrit ci-après).

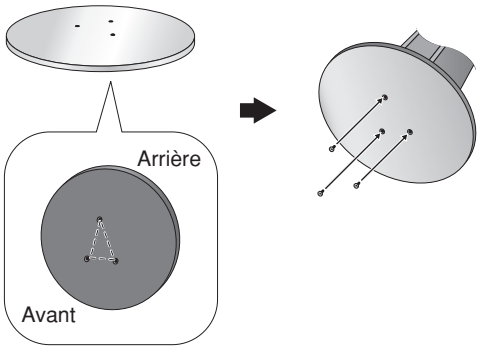

Fixez chacun des haut-parleurs avant et d'ambiance (S-FCR4700 seulement) au moyen de l'attache plastique fournie.

Vissez deux crochets pour cadre ou du même genre dans la paroi qui sera derrière le haut-parleur. Faites passer un cordon autour des crochets et par l'attache plastique de sorte que le haut-parleur soit stabilisé (prenez soin de vérifier que la paroi peut soutenir le poids du haut-parleur).

Après son installation, assurez-vous que le haut-parleur est fermement fixé.

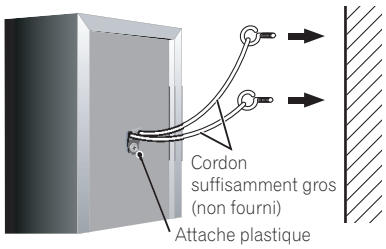

ATTENTION :

- L'attache plastique n'est pas une ferrure de fixation et le haut-parleur ne sera pas suspendu directement à une paroi au moyen de cette attache. Utilisez toujours un cordon pour immobiliser le haut-parleur.
- Pioneer décline toute responsabilité en cas de pertes ou de dégâts résultant d'une erreur d'assemblage et d'installation, d'une solidité insuffisante des matériaux d'installation, d'une utilisation inappropriée ou de catastrophes naturelles.

COUSSINETS ANTIDÉRAPANTS

Fixez les petits coussinets antidérapants sur la base des haut-parleurs d'ambiance (S-FCR3700 seulement) et du haut-parleur central. Les grands coussinets antidérapants sont destinés aux haut-parleurs avant, d'ambiance (S-FCR4700 seulement) et au caisson de basses (comme illustré). Utilisez le côté adhésif des coussinets pour les fixer sur la base de chaque haut-parleur et du caisson de basses.

Si vous choisissez d'utiliser des pieds d'enceinte avec les haut-parleurs d'ambiance, fixez les coussinets antidérapants sur la base des pieds plutôt que sur le fond des haut-parleurs (S-FCR3700 seulement).

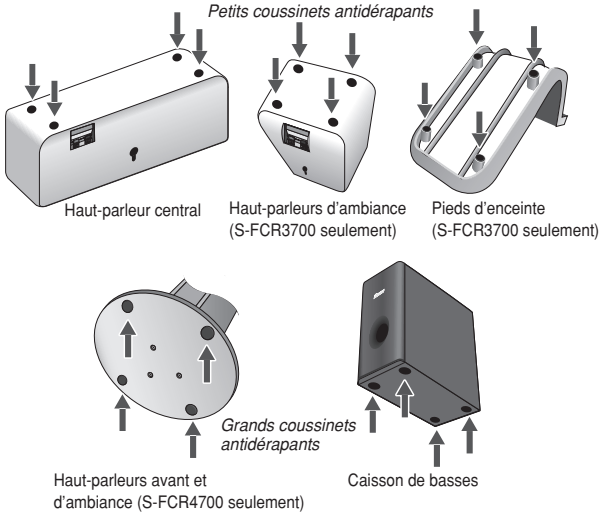

COMME OPTION, FIXEZ LES HAUT-PARLEURS D'AMBIANCE SUR LES PIEDS D'ENCEINTE (S-FCR3700 SEULEMENT).

Pour chaque enceinte, alignez les ergots du pied sur les orifices placés à l'arrière de l'enceinte puis insérez-les avant de fixer l'enceinte sur le pied avec la vis fournie.

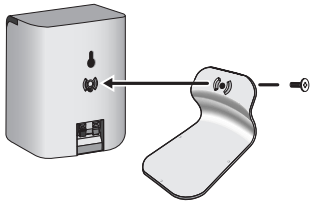

FIXATION DES HAUT-PARLEURS D'AMBIANCE (S-FCR3700 SEULEMENT) ET DU HAUT-PARLEUR CENTRAL SUR UNE PAROI

Des orifices de fixation sont prévus sur les haut-parleurs d'ambiance (S-FCR3700 seulement) et le haut-parleur central, afin de pouvoir attacher ceux-ci sur une paroi.

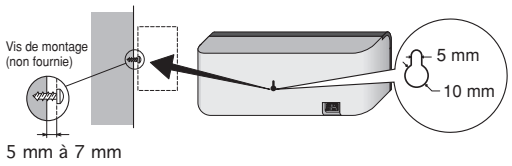

Avant la fixation (voir ci-avant), gardez à l'esprit les points suivants:

- Sachez que les haut-parleurs sont pesants et que leur poids peut entrainer le détachement des vis à bois ou l'arrachement du matériau auxquels ils sont fixés, ce qui provoquerait leur chute. Assurez-vous que la paroi sur laquelle vous voulez fixer les haut-parleurs soit assez résistante pour les supporter. Ne les installez pas sur une surface en contreplaqué ou sur une paroi friable.
- Des vis de montage ne sont pas fournies. Utilisez des vis appropriées au matériau de la paroi et pouvant résister au poids des haut-parleurs.

ATTENTION :

- Si vous hésitez quant aux propriétés et a la résistance des parois, demandez conseil à un professionnel.
- Pioneer n'assume aucune responsabilité en cas d'accident ou de dégats, découlant d'une installation inadequate.

ENTRETIEN DU COFFRET

Servez-vous d'un chiffon de nettoyage ou d'un linge sec pour enlever la poussière et la saleté.

Si le coffret est très sale, frottez-le au moyen d'un linge doux trempé dans un produit de nettoyage neutre, dilué 5 à 6 fois dans son volume l'eau, puis essuyez avec un linge sec. N'utilisez pas de cire ou de décapant pour meubles.

N'employez jamais de diluant, benzène, insecticide en atomiseur ou d'autres produits chimiques sur ou à proximité des coffrets de haut-parleur, car leurs surfaces en seraient détériorées.

GUIDE DE DÉPANNAGE

SYMPTÔME	CAUSE PROBABLE	CORRECTION
1. Absence de son	• Fil de haut-parleur endommagé ou connexion erronée. • L'ampli-tuner est hors tension. • La commande de volume est réglée sur zéro.	• Connectez correctement ou remplacez le fil. • Mettez l'ampli-tuner sous tension. • Élevez progressivement le volume sonore.
2. Le son est distordu.	• L'état des signaux est excessif.	• Réduisez le niveau de sortie de l'amplificateur (volume, commandes des basses, renforcement des graves) à un niveau approprié.

FICHE TECHNIQUE

HAUT-PARLEURS AVANT (S-FCR4700,S-FCR3700)

HAUT-PARLEURS D'AMBIANCE (S-FCR4700)

Coffret ..... Type plancher à coffret fermé (blindage magnétique)
Système ..... 2 voies
Haut-parleurs:
  Graves ..... Type à cone de 7,7 cm x 2
  Aigus ..... Type à semi-dôme de 2,6 cm
Impédance nominale ..... 8 Ω
Plage de fréquences ..... De 70 Hz à 20 kHz
Dimensions ..... 260 mm (L) x 1096,5 mm (H) x 260 mm (P)
Poids ..... 4,2 kg

HAUT-PARLEURS D'AMBIANCE (S-FCR3700)

Coffret ..... Type fermé, bibliothèque (blindage magnétique)
Système ..... 1 voie, 7,7 cm
Haut-parleur ..... Type à cône de 7,7 cm
Impédance nominale ..... 8 Ω
Plage de fréquences ..... De 80 Hz à 20 kHz
Dimensions ..... 100 mm (L) x 136 mm (H) x 80 mm (P)
Poids ..... 0,55 kg

HAUT-PARLEUR CENTRAL (S-FCR4700,S-FCR3700)

Coffret ..... Type fermé, bibliothèque (blindage magnétique)
Système ..... 1 voie, 7,7 cm
Haut-parleur ..... Type à cône de 7,7 cm
Impédance nominale ..... 8 Ω
Plage de fréquences ..... De 75 Hz à 20 kHz
Dimensions ..... 270 mm (L) x 96 mm (H) x 90 mm (P)
Poids ..... 0,78 kg

CAISSON DE BASSES (S-W3700-K)

Coffret ..... Type bass réflex, sur plancher
Système ..... 1 voie, 16 cm
Haut-parleur ..... Type à cône de 16 cm
Impédance nominale ..... 8 Ω
Plage de fréquences ..... De 30 Hz à 2 kHz
Dimensions ..... 190 mm (L) x 360 mm (H) x 320 mm (P)
Poids ..... 4,0 kg

ACCESSOIRES

Cordons de haut-parleur
  (S-FCR4700,S-FCR3700) 5
  (S-W3400-K) 1
Coussinets antidérapants
(Pour le caisson de bases) (S-W3700-K) 4
Coussinets antidérapants (grands)
(Pour les bases de support de haut-parleur)
  (S-FCR3700) 8
  (S-FCR4700) 16
Coussinets antidérapants (petits)
  (Pour le haut-parleur central et les haut-parleurs d'ambiance)
  (S-FCR3700) 12
  (Pour le haut-parleur central) (S-FCR4700) 4
Pieds d'enceinte
  (Pour les haut-parleurs d'ambiance) (S-FCR3700) 2
Vis (Pour les Pieds d'enceinte) (S-FCR3700) 2

REMARQUE : Spécifications et design sous réserve de changements sans préavis en raison d'améliorations éventuelles.

Publication de Pioneer Corporation.
© 2007 Pioneer Corporation.
Tous droits de reproduction et de traduction reserves.

LIMITED WARRANTY

PIONEER ELECTRONICS (USA) INC. PIONEER ELECTRONICS OF CANADA, INC.

WARRANTY PERIOD

For the period specified below from date of original retail purchase (the warranty period) from an authorized Pioneer dealer, Pioneer Electronics (USA) Inc. (PUSA), and Pioneer Electronics of Canada, Inc. (POC) warrants that products distributed by PUSA in the U.S.A., and by POC in Canada that fail to function properly under normal use due to a manufacturing defect when installed and operated according to the operating instructions enclosed with the unit will be repaired or replaced with a unit of comparable value, at the option of PUSA or POC, without charge to you for parts or actual repair work. Parts supplied under this warranty may be new or rebuilt at the option of PUSA or POC.

	WARRANTY PERIOD	
PRODUCT	**PARTS**	**LABOR**
Loudspeakers / Subwoofers (amplifier section not included)	**1 YEAR**	**1 YEAR**
Amplifier Section (if applicable)	**1 YEAR**	**1 YEAR**

This warranty covers the product during the warranty period whether in the possession of the original owner or any subsequent owner. In the event service is required, the product must be delivered within the warranty period, transportation prepaid, fro m within the Country of purchase as explained in this document. You will be responsible for removal and installation of the product.

WHAT'S NOT COVERED

This warranty does not cover any product which is used in any trade or business, or in an industrial or commercial application.
This warranty does not apply to any speaker that has been subjected to power in excess of its published power rating.
This warranty does not cover the cabinet or any appearance item, any damage to the product resulting from alterations or modifications not authorized in writing by PUSA or POC, accident, misuse or abuse, or damage due to lightning or to power surges.
This warranty does not cover the cost of parts or labor which would be otherwise provided without charge under this warranty obtained from any source other than a PUSA OR POC Authorized Service Company or other designated location. This warranty does not cover defects or damage caused by the use of unauthorized parts or labor, or from improper maintenance.
ALTERED, DEFACED OR REMOVED SERIAL NUMBERS VOID THIS WARRANTY.

YOUR RIGHTS

PUSA and POC excludes any obligation on its part for incidental or consequential damages related to the failure of products to function properly under the conditions set forth above.
IN THE U.S.A. - PUSA LIMITS ITS OBLIGATIONS UNDER ANY IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO A PERIOD NOT TO EXCEED THE WARRANTY PERIOD. NO WARRANTIES SHALL APPLY AFTER THE WARRANTY PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, AND SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.
IN CANADA - EXCEPT AS EXPRESSLY PROVIDED HEREIN, THERE ARE NO REPRESENTATIONS, WARRANTIES, OBLIGATIONS OR CONDITIONS, IMPLIED, STATUTORY OR OTHERWISE, APPLICABLE TO THIS PRODUCT.

TO OBTAIN SERVICE

PUSA and POC have appointed a number of Authorized Service Companies throughout the U.S.A., and Canada should your product ever require service. To receive warranty service you will need to present your sales receipt or, if rented, your rental contract showing place and date of original owner's transaction. Should it become necessary to ship your unit, you will need to package the product carefully and send it, transportation prepaid by a traceable, pre-insured method, to an Authorized Service Company. Carefully package the product using adequate padding material to prevent damage in transit. The original container is ideal for this purpose. Include in the package your name, address, telephone number where you can be reached during business hours, a copy of your sales receipt and a detailed description of the problem. PUSA or POC, as appropriate, will pay for the cost of returning the repaired or replacement product to you within the Country of purchase.

For additional information about this limited warranty or to locate the nearest PUSA or POC Authorized Service Company, please contact:

IN THE U.S.A.
CUSTOMER SERVICE DEPARTMENT
PIONEER ELECTRONICS (USA) INC.
P.O. BOX 1760
LONG BEACH, CA 90801-1760, U.S.A
Phone: (800)421-1404

IN CANADA
CUSTOMER SERVICE DEPARTMENT
PIONEER ELECTRONICS OF CANADA, INC.
300 ALLSTATE PARKWAY
MARKHAM, ON L3R 0P2
Phone: 1-877-283-5901, 905-479-4411

DO NOT RETURN ANY PRODUCT TO THE ABOVE ADDRESSES. THEY ARE NOT SERVICE LOCATIONS.

RECORD THE PLACE AND DATE OF PURCHASE FOR FUTURE REFERENCE

Model No.: _____ Serial No.: _____

Purchase Date: _____ Purchased From: _____

KEEP THIS INFORMATION AND YOUR SALES RECEIPT IN A SAFE PLACE

PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654. Japan
PIONEER ELECTRONICS (USA) INC. P.O. BOX 1540, Long Beach, California 90801-1540, U.S.A TEL:(800)421-1404
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2, Canada TEL:1-877-283-5901, 905-479-4411
PIONEER ELECTRONIC (EUROPE) N.V. Haven 1087 Keetberglaan 1,9120 Melsele, Belgium, TEL: 03/570.05.11
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 9586-6300
PIONEER ELECTRONICS DE MEXICO S.A. DE C.V. Blvd. Manuel Avila Camacho 138, 10 piso, Col. Lomas De Chapultepec, Mexico D.F. 11000, TEL: 52-55-9178-4270

Printed in China <SRD6083-A>

Published by Pioneer Corporation.
Copyright © 2007 Pioneer Corporation.
All rights reserved.